

Report No.: 1

Test Time: 2017-01-05 10:45

Luminaire Property

Luminaire Category: 0119.G.U341.6
Luminaire Description: 60073
Length (mm): 133
Height (mm): 2
Current: 0.065 A
Power Factor: 0.983

Luminaire Manufacturer: Brasled
Width (mm): 133
Voltage: 230.1 V
Power: 14.78 W

Photometric Results


CIE Class: Direct
Measurement Flux: 1131.8 lm
Downward Ratio: 100%
Field Angle: H78.0 V77.8
Luminaire Efficacy Rating (LER): 77
Max. Intensity: 1915.44 cd

Total Rated Lamp Lumens: 1131.8 lm
Efficiency: 100%
Upward Ratio: 0%
Beam Angle: H42.3 V42.3
Central Intensity: 1914.14 cd
Pos of Max. Intensity: H157.5 V0

Picture Of Luminaire



Luminous Intensity Distribution Curve

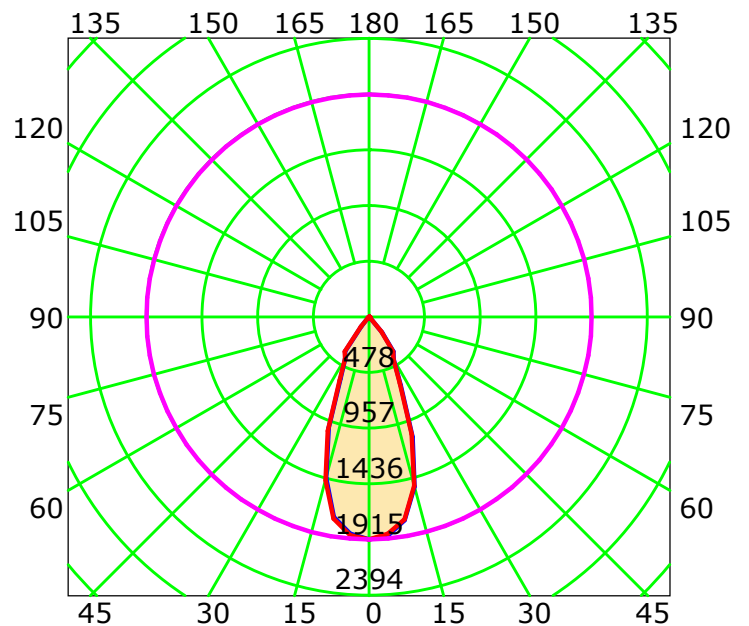



Average Diffuse Angle(50%): 42.3° Unit: cd

— C0-C180 — C90-C270 — G0

C Plane (°):0.0-360.0: 22.5
Test Lab: Brasled
Test Type: TYPE C
Temperature: 26
Operator:

Gamma Plane (°):0.0-90.0:5.0
Test Device: LSG-1200A
Distance: 1.0 m
Humidity: 60
Inspector:

Luminous Intensity Distribution Curve

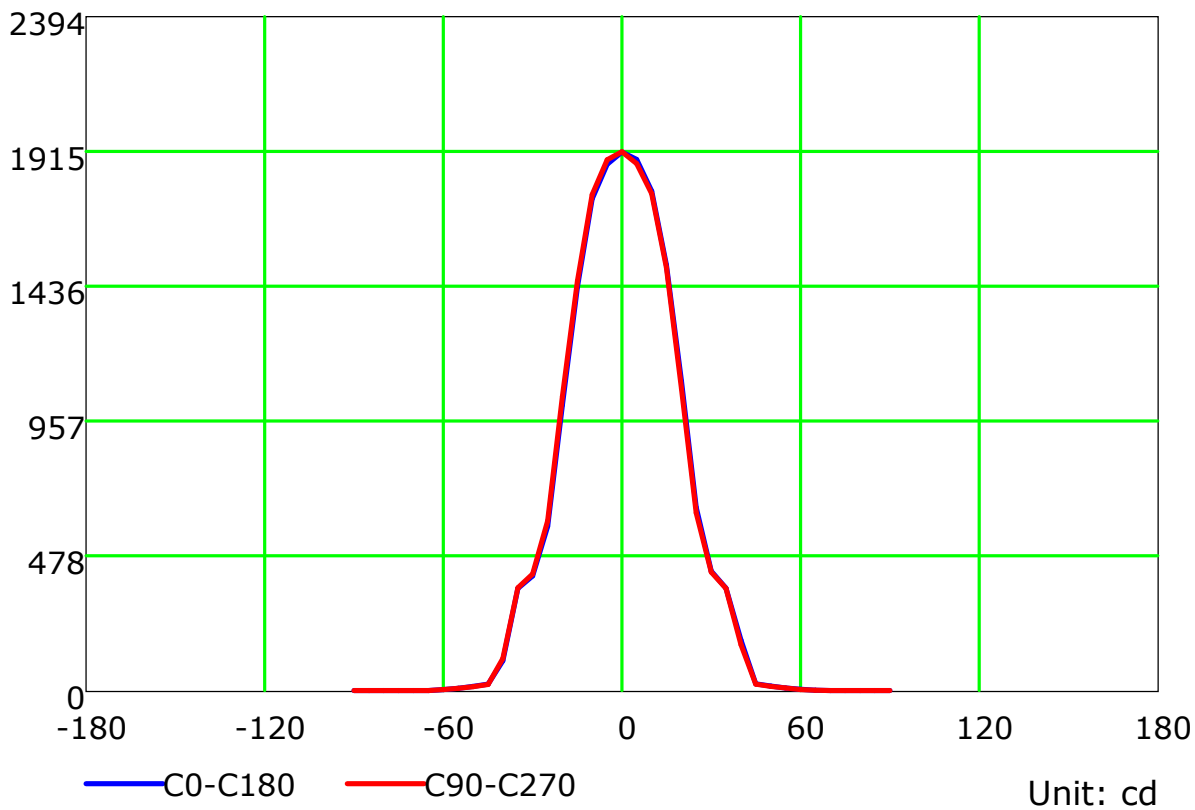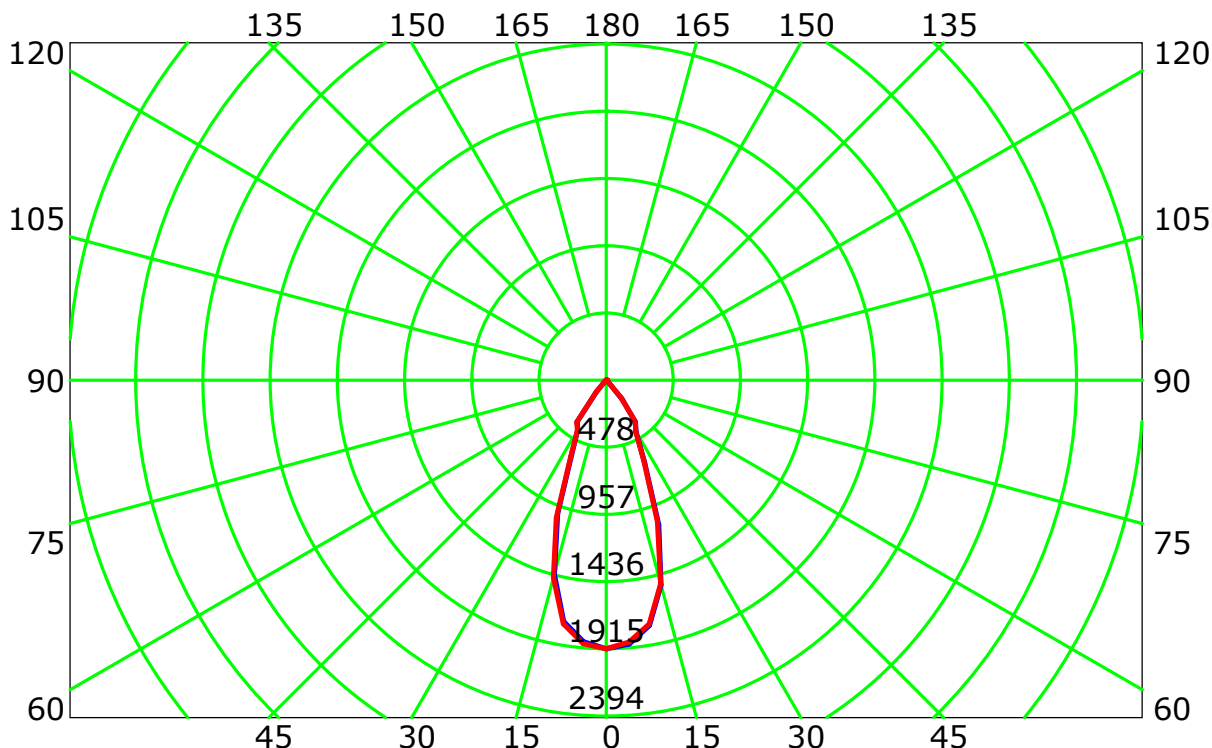


C Plane (°): 0.0-360.0: 22.5
 Test Lab: Brasled
 Test Type: TYPE C
 Temperature: 26
 Operator:

Gamma Plane (°): 0.0-90.0: 5.0
 Test Device: LSG-1200A
 Distance: 1.0 m
 Humidity: 60
 Inspector:

Coefficients Of Utilization - Zonal Cavity Method

RC	0.8	0.8	0.8	0.8	0.7	0.7	0.7	0.7	0.5	0.5	0.5	0.3	0.3	0.3	0.1	0.1	0.1	0
RW	0.7	0.5	0.3	0.1	0.7	0.5	0.3	0.1	0.5	0.3	0.1	0.5	0.3	0.1	0.5	0.3	0.1	0
RCR	RF = 0.2																	
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100
1	114	111	109	107	112	109	107	105	105	104	102	102	100	99	98	97	96	94
2	109	104	101	98	107	103	99	97	100	97	94	97	94	92	94	92	90	89
3	104	98	94	90	102	97	93	89	94	91	88	92	89	86	90	87	85	84
4	99	92	87	84	98	91	87	83	89	85	82	87	84	81	86	83	80	79
5	95	87	82	78	93	86	81	78	85	80	77	83	79	76	82	78	76	74
6	91	83	77	73	89	82	77	73	80	76	73	79	75	72	78	74	72	70
7	87	78	73	69	86	78	73	69	77	72	69	75	71	68	74	71	68	67
8	83	74	69	65	82	74	69	65	73	68	65	72	68	65	71	67	64	63
9	80	71	66	62	79	70	65	62	70	65	62	69	64	61	68	64	61	60
10	76	68	62	59	76	67	62	59	66	62	59	66	61	58	65	61	58	57


Spacing Criteria (0-180): 0.69
 Spacing Criteria (90-270): 0.69
 Spacing Criteria (Diagonal): 0.65

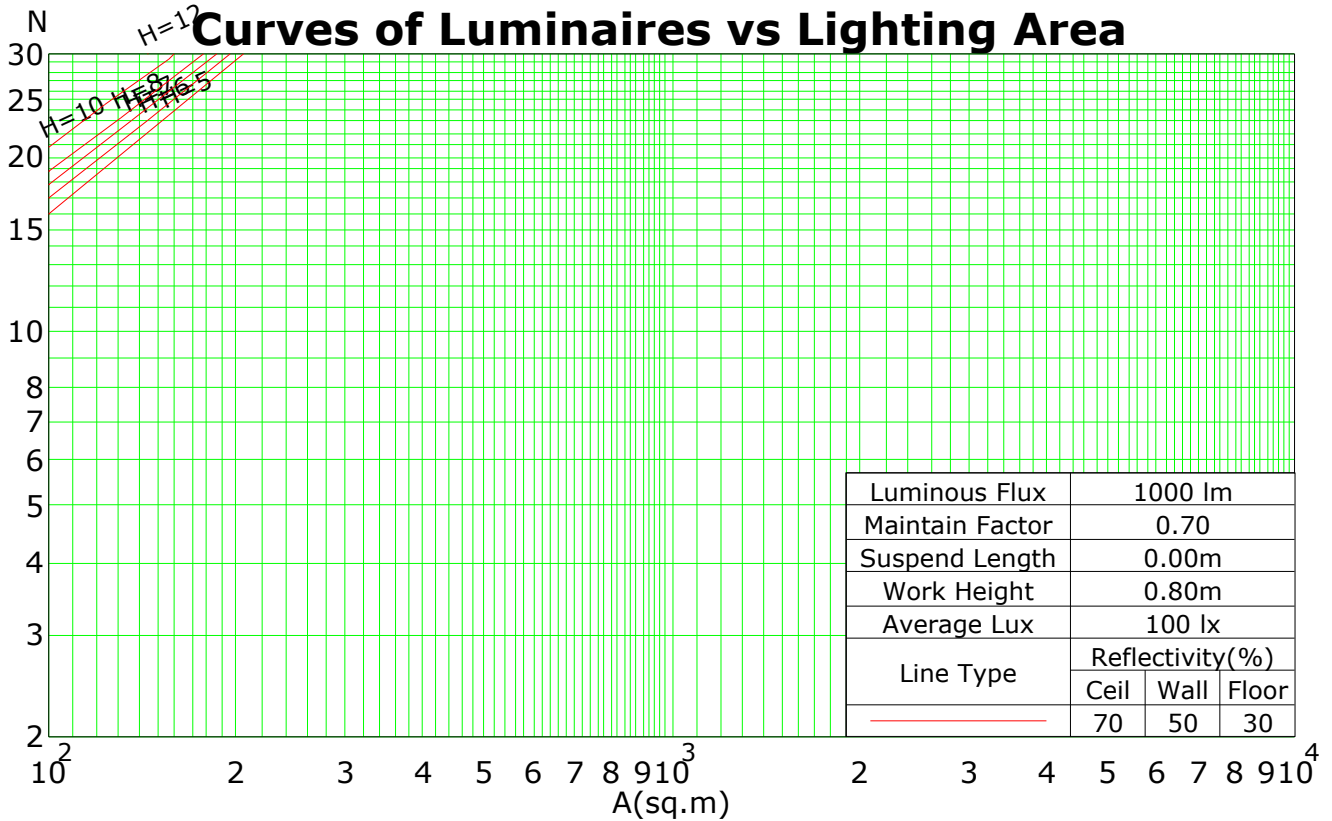

C Plane (°):0.0-360.0: 22.5
 Test Lab: Brasled
 Test Type: TYPE C
 Temperature: 26
 Operator:

Gamma Plane (°):0.0-90.0:5.0
 Test Device: LSG-1200A
 Distance: 1.0 m
 Humidity: 60
 Inspector:

Isocandela (rectangle)

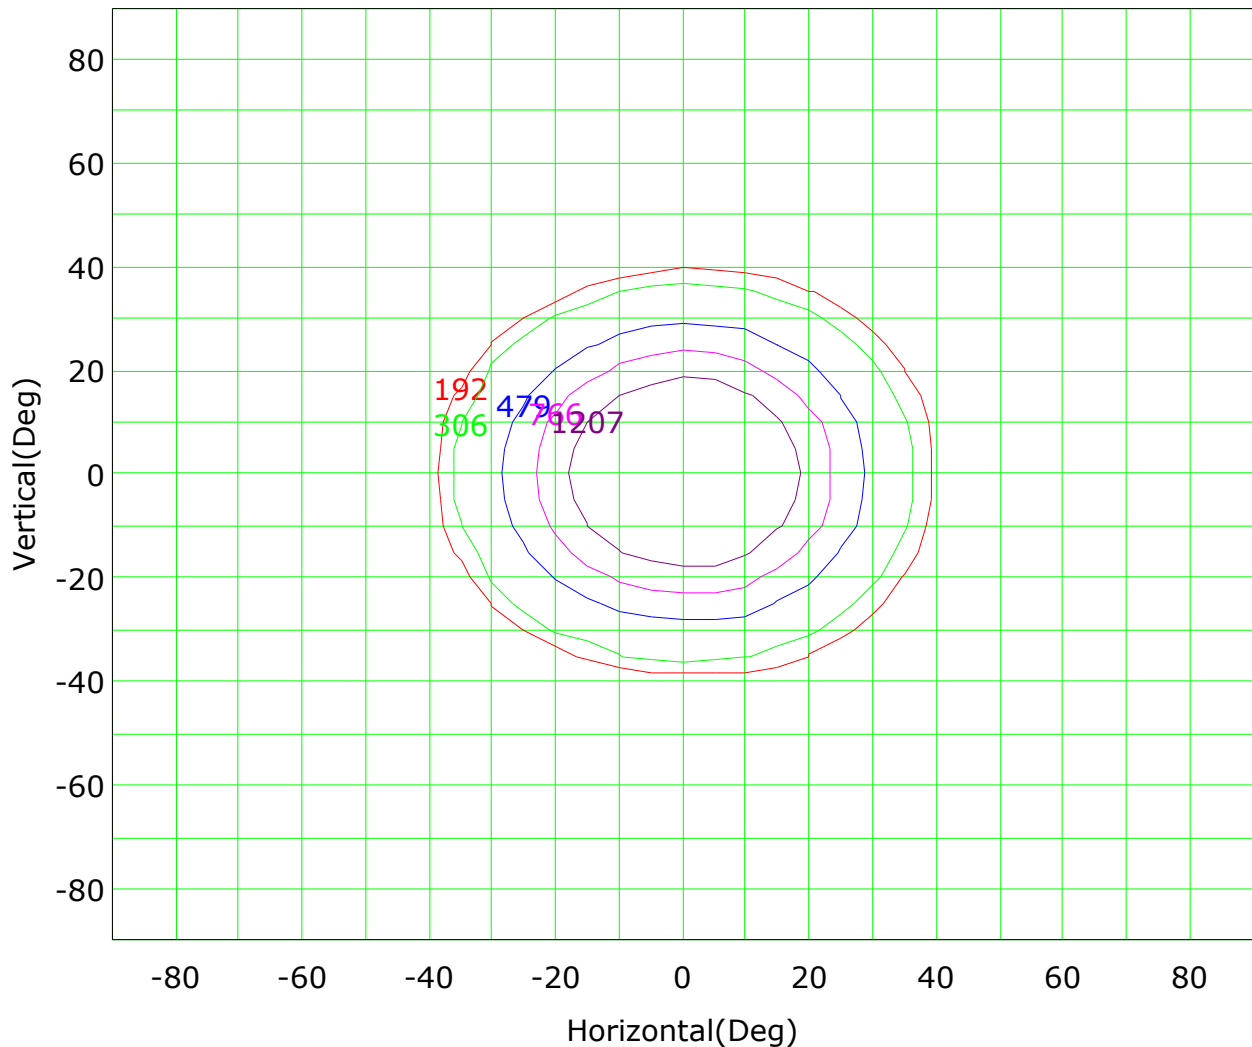


Imax (100%): 1915 cd

— (10%): 192 cd	— (16%): 306 cd
— (25%): 479 cd	— (40%): 766 cd
— (63%): 1207 cd	— (100%): 1915 cd

C Plane (°):0.0-360.0: 22.5
Test Lab: Brasled
Test Type: TYPE C
Temperature: 26
Operator:

Gamma Plane (°):0.0-90.0:5.0
Test Device: LSG-1200A
Distance: 1.0 m
Humidity: 60
Inspector:

IsoLux Plot

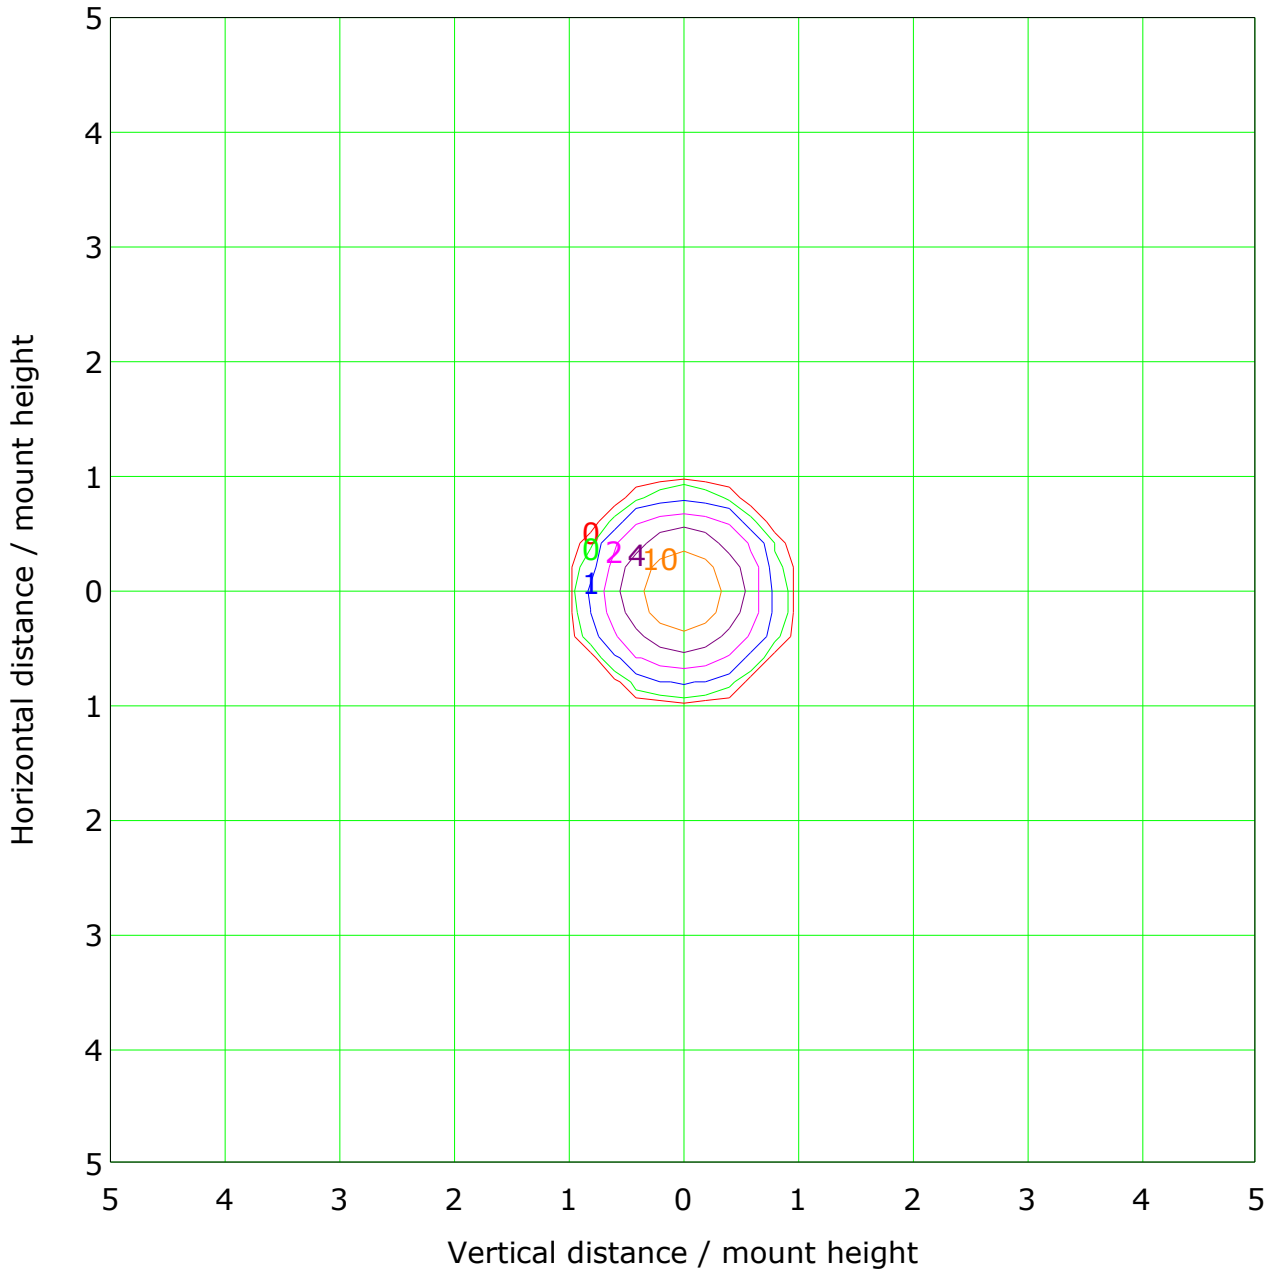

Mounting Height: 10.0m		Max Lux(100%): 19.2 lx	
— (1%):	0.2 lx	— (2%):	0.4 lx
— (5%):	1.0 lx	— (10%):	1.9 lx
— (20%):	3.8 lx	— (50%):	9.6 lx
— (100%):	19.2 lx		



C Plane (°):0.0-360.0: 22.5
 Test Lab: Brasled
 Test Type: TYPE C
 Temperature: 26
 Operator:

Gamma Plane (°):0.0-90.0:5.0
 Test Device: LSG-1200A
 Distance: 1.0 m
 Humidity: 60
 Inspector:

Lum Limit Curve

Dazzle	Quality	Illuminance (lx)								
		2000	1000	500	<=300					
1.15	A									
1.50	B									
1.85	C									
2.20	D									
2.55	E									

a b c d e f g h

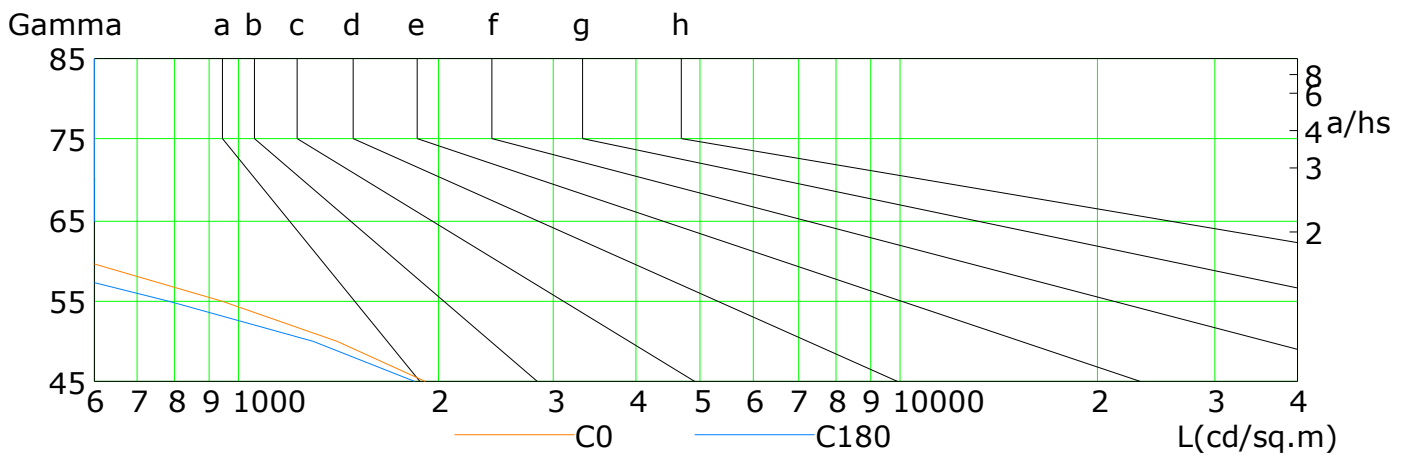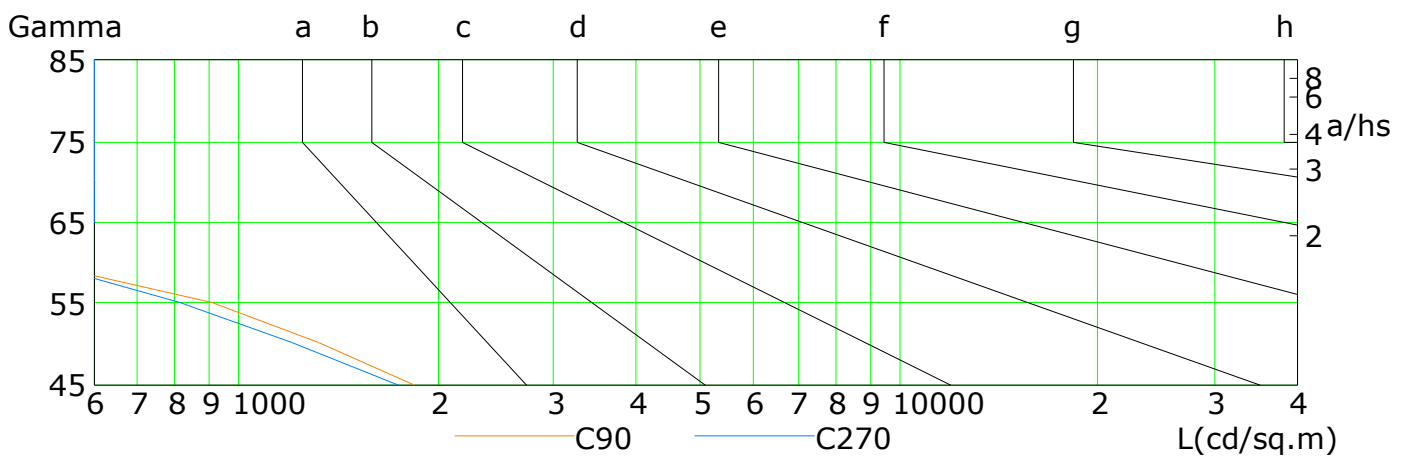


L(cd/sq.m)	G45	G50	G55	G60	G65	G70	G75	G80	G85
C0	1914	1400	938	571	251	0	0	0	0
C90	1837	1316	906	500	251	0	0	0	0
C180	1837	1287	782	429	0	0	0	0	0
C270	1735	1204	812	500	0	0	0	0	0


C Plane (°):0.0-360.0: 22.5
 Test Lab: Brasled
 Test Type: TYPE C
 Temperature: 26
 Operator:

Gamma Plane (°):0.0-90.0:5.0
 Test Device: LSG-1200A
 Distance: 1.0 m
 Humidity: 60
 Inspector:

Illuminance at a Distance

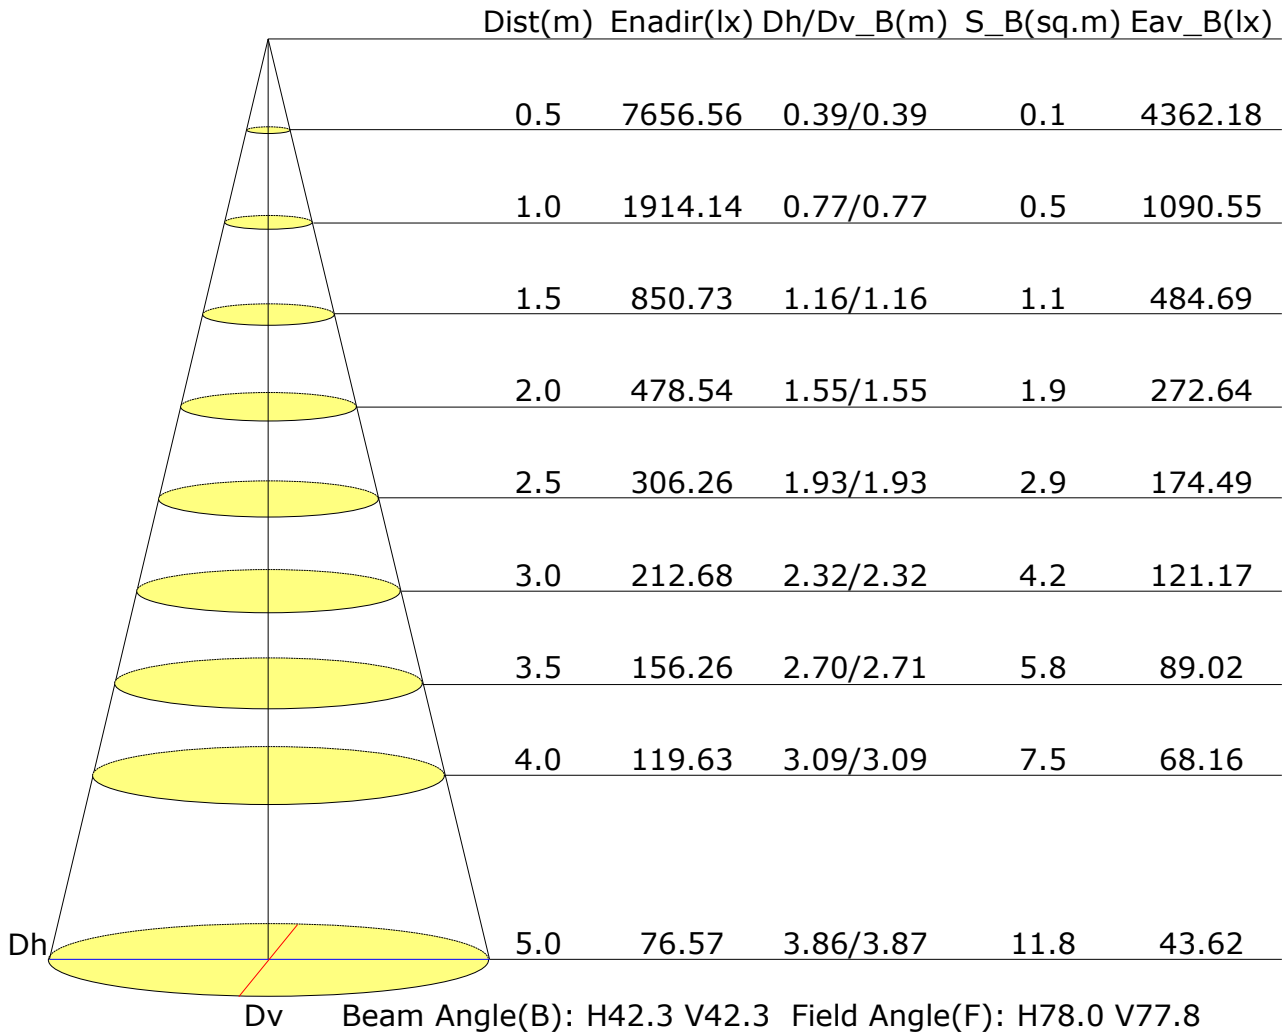


Vertical IsoLux Plot

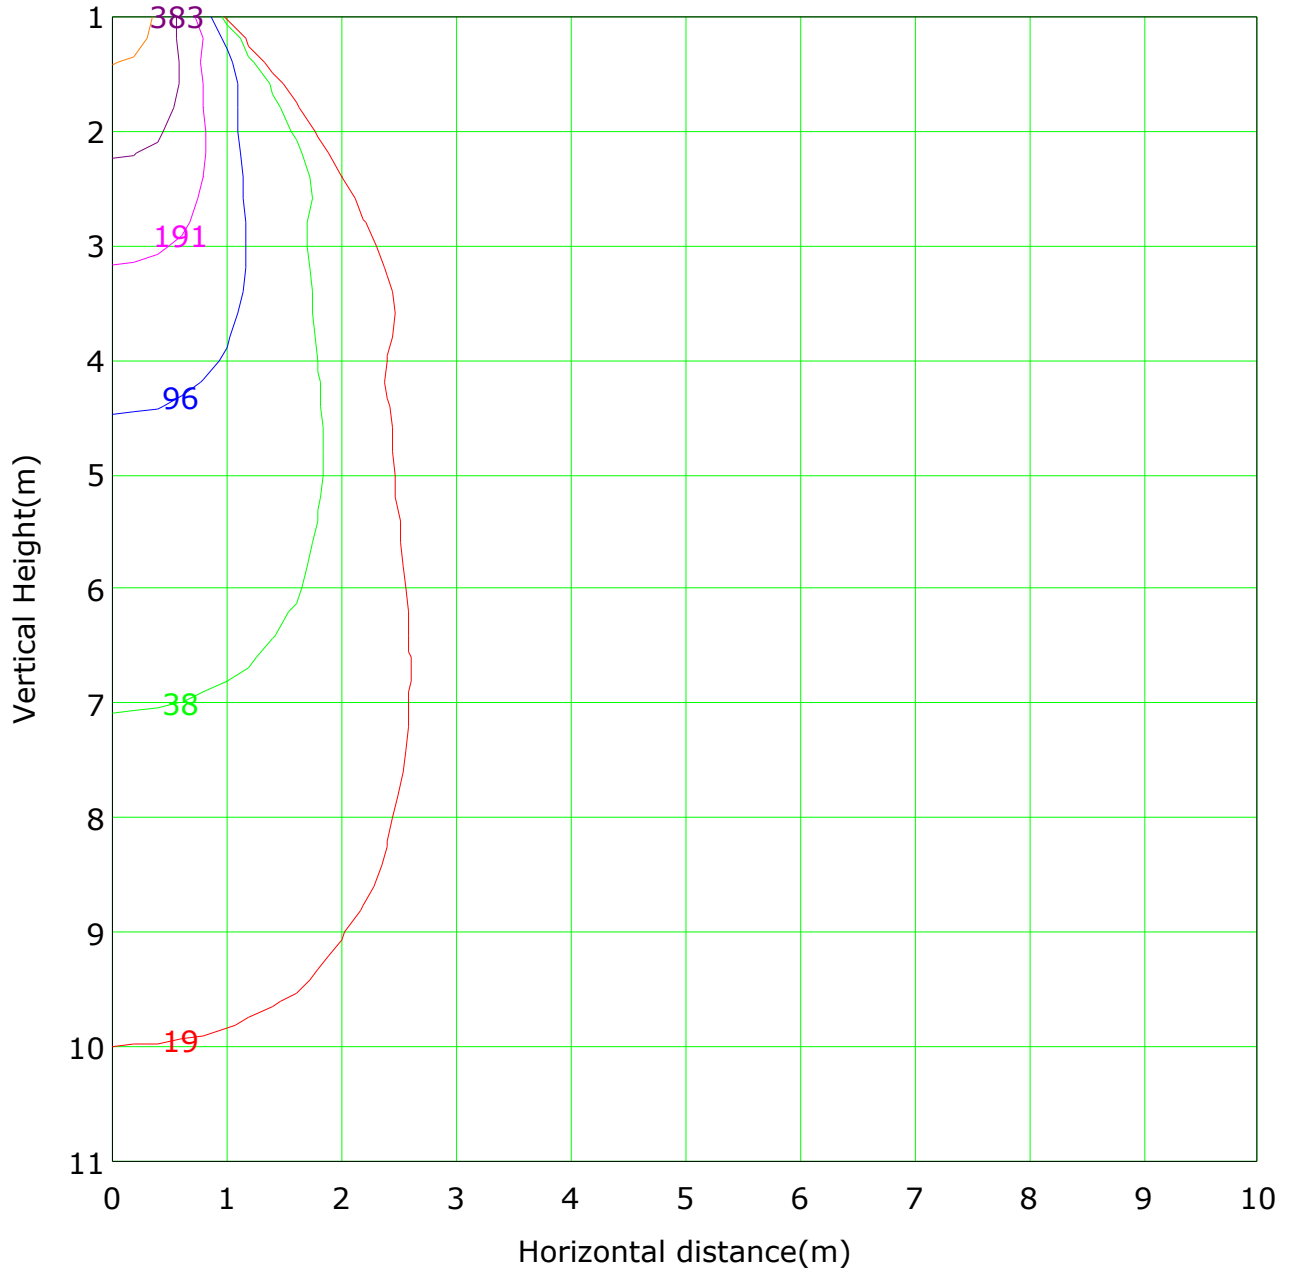

Lowest(m): 1.0m Highest(m): 11.0m Max Lux: 1914.1 lx

— (1%): 19.1 lx	— (2%): 38.3 lx
— (5%): 95.7 lx	— (10%): 191.4 lx
— (20%): 382.8 lx	— (50%): 957.1 lx
— (100%):1914.1 lx	

The Average Illuminance Effective Figure

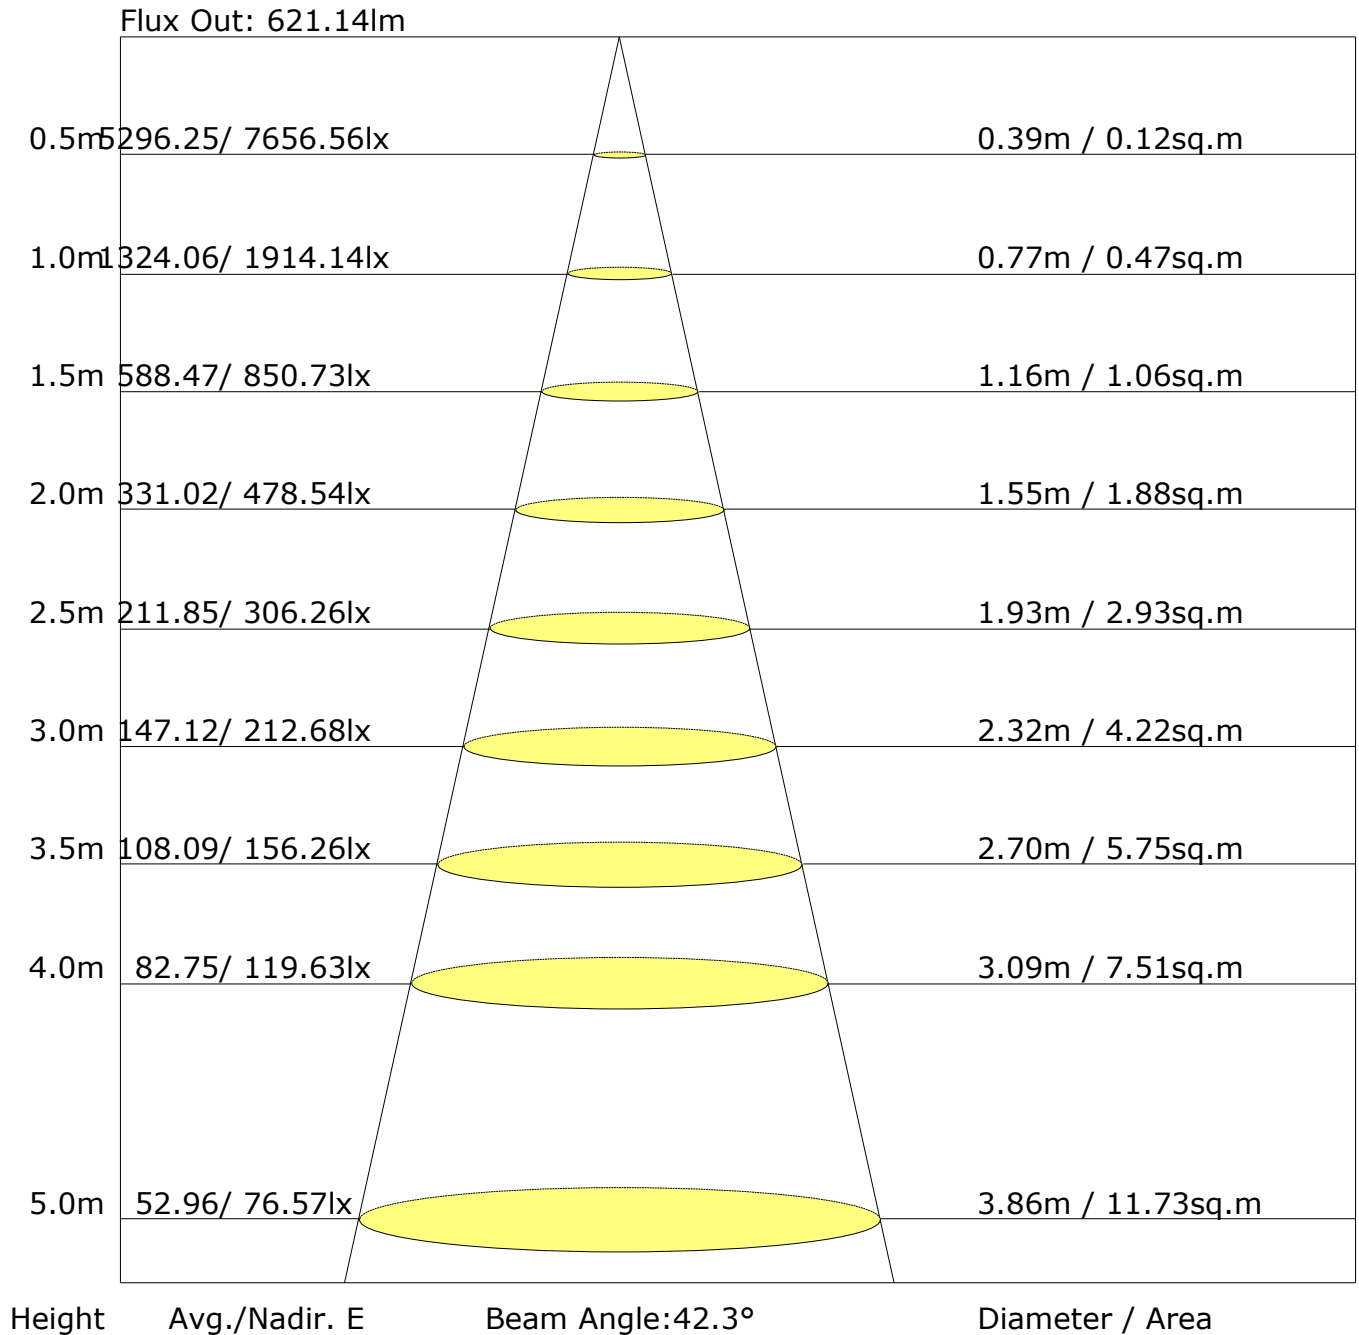

C Plane (°): 0.0-360.0: 22.5
 Test Lab: Brasled
 Test Type: TYPE C
 Temperature: 26
 Operator:

Gamma Plane (°): 0.0-90.0: 5.0
 Test Device: LSG-1200A
 Distance: 1.0 m
 Humidity: 60
 Inspector: